


O-RING INSPECTION

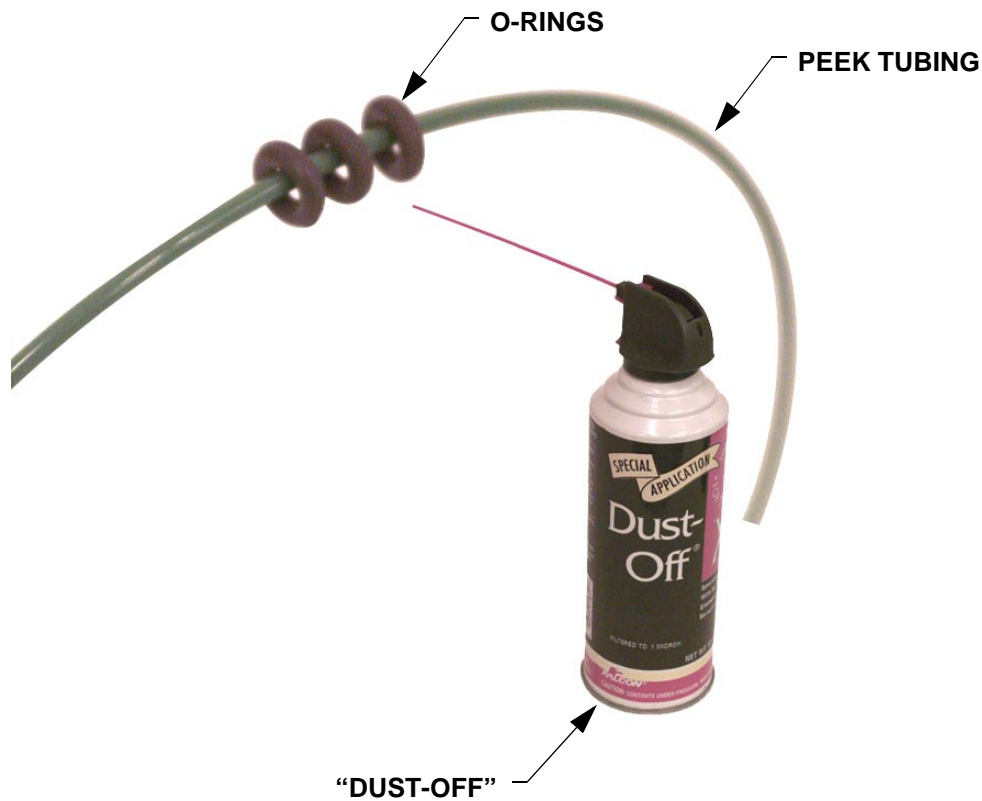

OPERATION NOTES

1. DO NOT TOUCH BAKED O-RINGS AT ANY TIME.
2. REMOVE BAKED O-RINGS FROM STORAGE JAR WITH TWEEZERS.
3. INSPECT BOTH SIDES OF THE BAKED O-RING FOR CRACKS UNDER A MICROSCOPE.
4. CLEAN BAKED O-RINGS BY INSERTING A PIECE OF PEEK TUBING THRU CENTER OF O-RING AND SPRAY THOROUGHLY WITH "DUST OFF" (AS SHOWN).
5. ONLY CLEAN WHAT WILL BE IMMEDIATELY USED.
6. WHENEVER O-RINGS ARE USED, USE "DUST-OFF" TO CLEAN PART SURFACE BEFORE AND AFTER ADDING O-RINGS.